


as desired.

request.

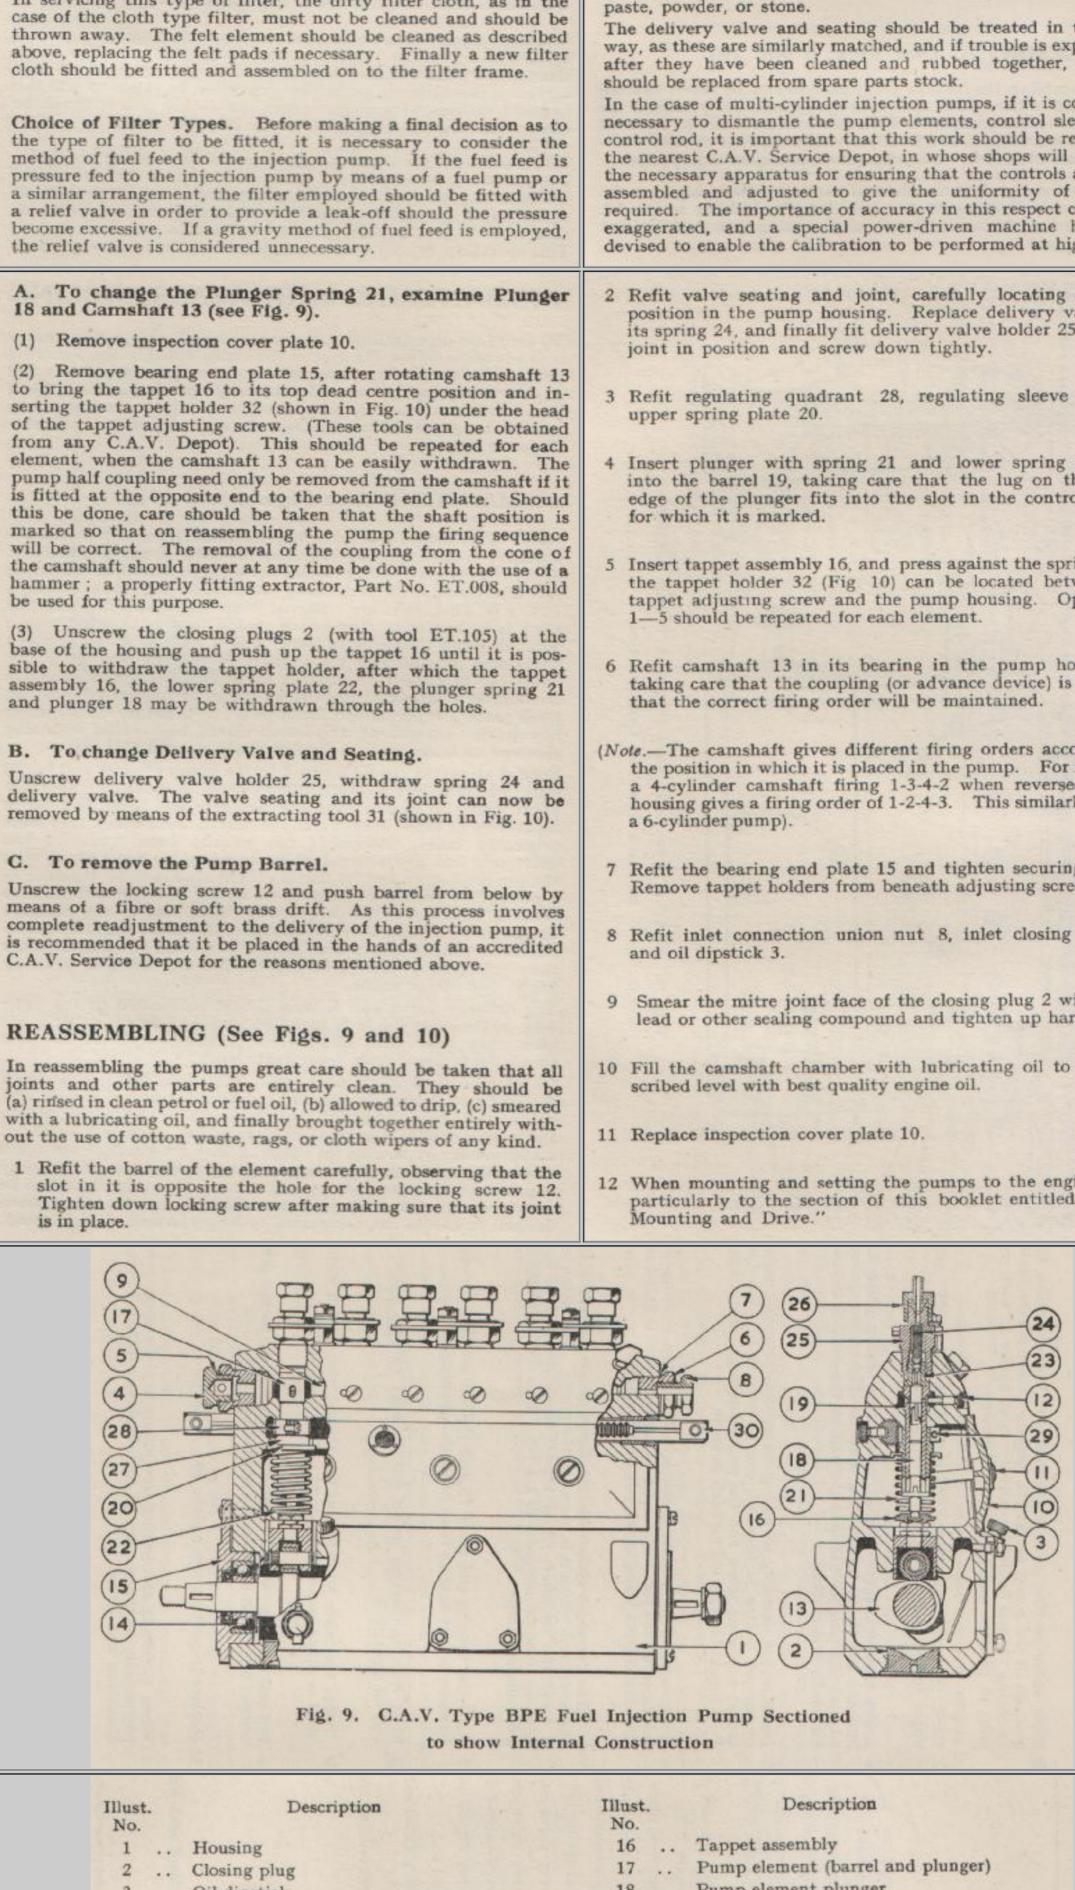

Inlet closing plug

.. Inlet connection stud

.. Fuel inlet nipple nut

11 .. Screw with spring ring for (10)

Joint for (6)

10 .. Inspection cover plate

12 .. Locking screw and joint

9 .. Suction chamber


13 .. Camshaft

IMPORTANT

14 .. Ball bearing

15 .. Bearing end plate

.. Joint for (4)

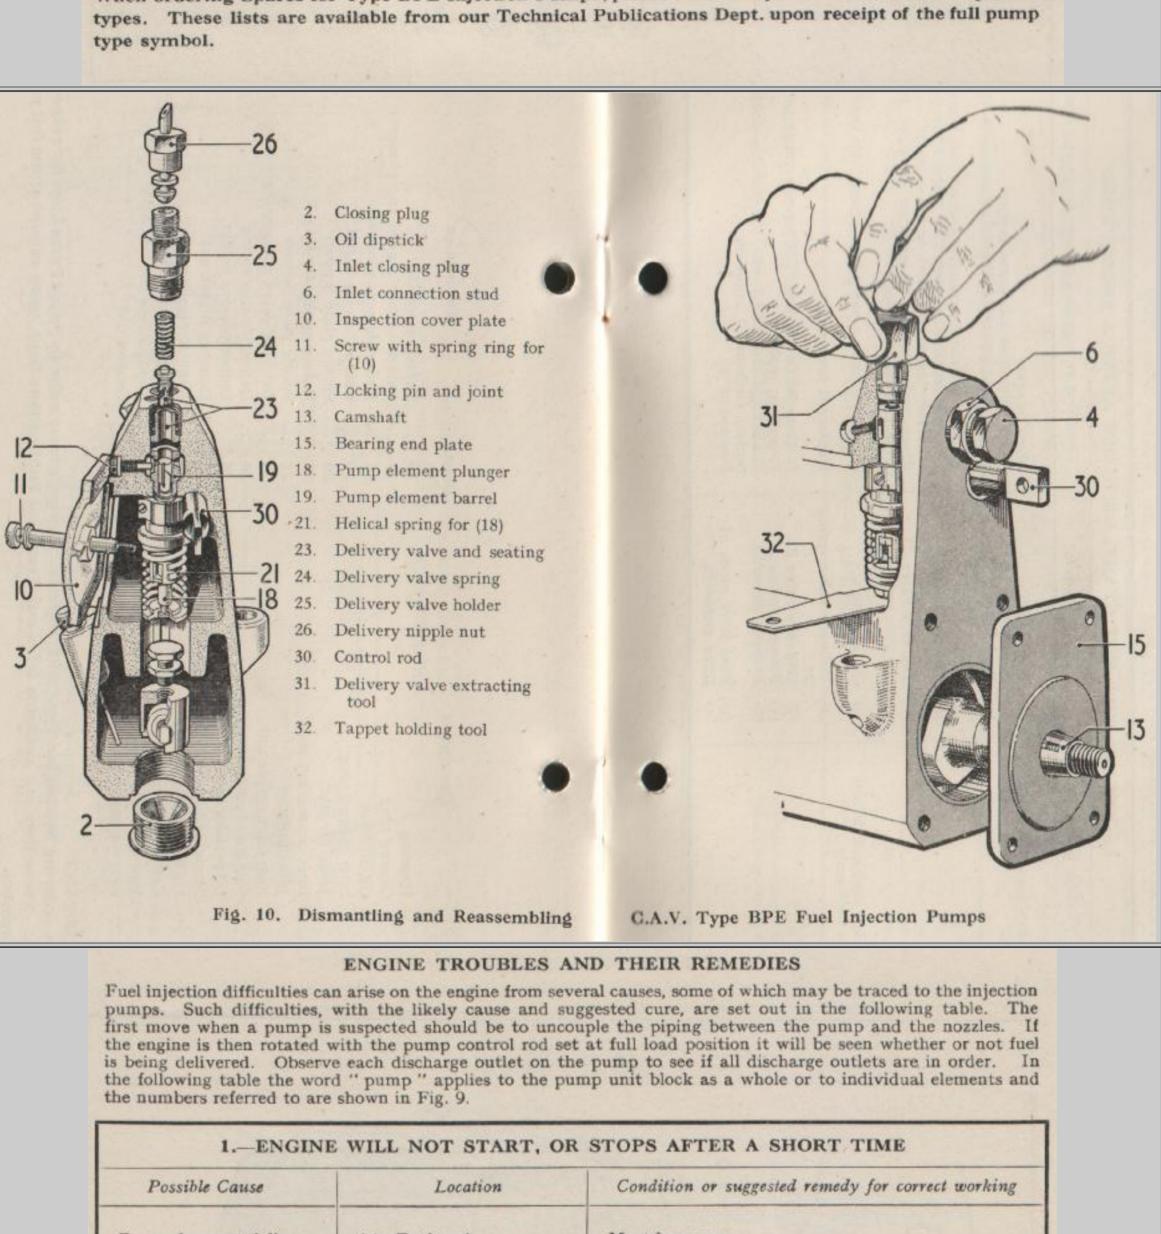

When ordering Spares for Type BPE Injection Pumps, please refer to Spare Parts Lists for respective

20 .. Spring plate (upper)

22 .. Spring plate (lower)

24 .. Delivery valve spring

25 .. Delivery valve holder

26 .. Delivery nipple nut

27 .. Regulating sleeve

29 .. Clamp screw

30 .. Control rod

21 .. Helical spring for (18)

23 .. Delivery valve and seating

28 .. Regulating toothed quadrant